




 **Warnhinweise Fugenverarbeitung**
 **Warning notes on joint processing**
 **Wskazówki ostrzegawcze dotyczące wspólnego przetwarzania**
 **Ortak işlemeyle ilgili uyarı notları**
 **Shënime paralajmëruese për përpunimin e përbashkët |**
 **Предупреждающие заметки о совместной обработке**

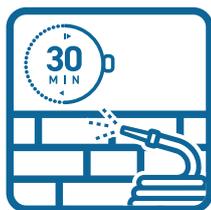


-  Unmittelbar vor der Verfugung die Wand vornässen.
-  Wet the wall immediately before grouting.
-  Zwilżyć ścianę bezpośrednio przed fugowaniem.
-  Derzleme işleminden hemen önce duvarı ıslatın.
-  Lagni murin menjëherë para grouting.
-  Смочите стену непосредственно перед цементацией.

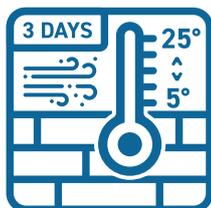

-  Temperatur (Luft und Oberfläche) nicht unter 5 und über 25 Grad (bis 3 Tage nach der Verfugung)
-  Temperature (air and surface) not below 5 and above 25 degrees (until 3 days after grouting)
-  Temperatura (powietrza i powierzchnia) nie niższa niż 5 i nie wyższa niż 25 stopni (do 3 dni po spoinowaniu)
-  Hava ve yüzey sıcaklığı, harç uygulandıktan sonra 3 gün boyunca 5 ° C ile 25 ° C arasında olmalıdır.
-  Temperatura (ajri dhe sipërfaqe) jo nën 5 dhe mbi 25 gradë (deri në 3 ditë pas grouting)
-  Температура (воздух и поверхность) не ниже 5 и выше 25 градусов (до 3 дней после цементации)

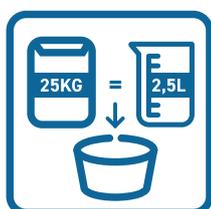

-  Wasseranspruch 2,5 - 3,0 Liter per Sack, nicht zu trocken (!) anmischen
-  Water requirement 2.5 - 3,0 litres per bag, do not mix too dry (!)
-  Zapotrzebowanie na wodę 2,5 - 3,0 litra na worek, nie mieszać zbyt sucho (!)
-  Bir torba içeriğini 2,5 - 3,0 litre su ile harç yapın. Harcın fazla kuru olmamasına dikkat edin.
-  2,5 - 3,0 litra ujë për qese, mos përzieni shumë të thatë (!)
-  2,5 - 3,0 литра воды на мешок, не смешивайте слишком сухо (!)

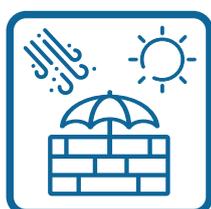

-  Vor direkter Sonneneinstrahlung und Windzug schützen
-  Protect from direct sunlight and draughts
-  Chronić przed bezpośrednim działaniem promieni słonecznych i przeciągami
-  Güneş ışığından ve taslaktan koruyun.
-  Mbroni nga rrezet e diellit direkte dhe drafti
-  Защищать от прямых солнечных лучей и сквозняков



-  Frühzeitig nachwässern
-  Early re-watering
-  Wczesne ponowne nawadnianie
-  Erken sulayın.
-  Ri-ujë përsëri
-  Повторно поливать рано